MEGAHUNT

AN2x0009

应用手册

MH2457

MDK JLINK 配置

引言

本文档是对 MH2457 开发环境的介绍，包括 Keil 软件的下载、安装、激活和注意事项。

目录

1. Keil 下搭建 JLINK 环境 3
1.1. 选择 Device 3
1.2. 设置 Target 3
1.3. 设置仿真器 4
1.4. 设置 Utilities flash 5
2. 修订记录 7

表格

表 2-1 修订记录 7

图片

图 1-1 选择 Deivice 3
图 1-2 Target 设置 4
图 1-3 仿真器设置一 4
图 1-4 仿真器设置二 5
图 1-5 Flash.ini 文件 5
图 1-6 Flash Download 设置 6

1. Keil 下搭建 JLINK 环境

1.1. 选择 Device

Device 选择 Cortex-M4 FPU

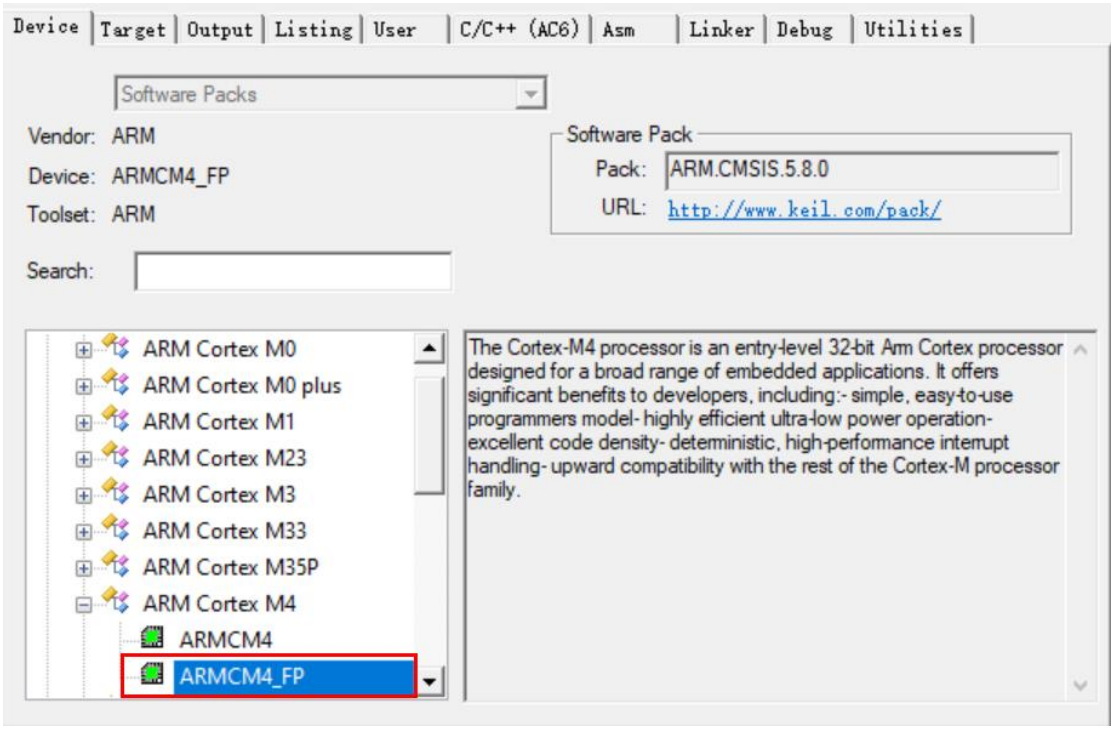


图 1-1 选择 Deivice

1.2. 设置 Target

在 Flash 中调试时 IROM 起始地址需要在 0x8001000 或以后地址，size 根据实际程序大小配置即可。注意 IROM 起始地址+大小不能超出内部 Flash 地址范围。

芯片内置 1.25M 的静态 SRAM(地址：0x20000000~0x2013FFFF)，IRAM 配置在此范围即可，具体可参考下图示例配置。

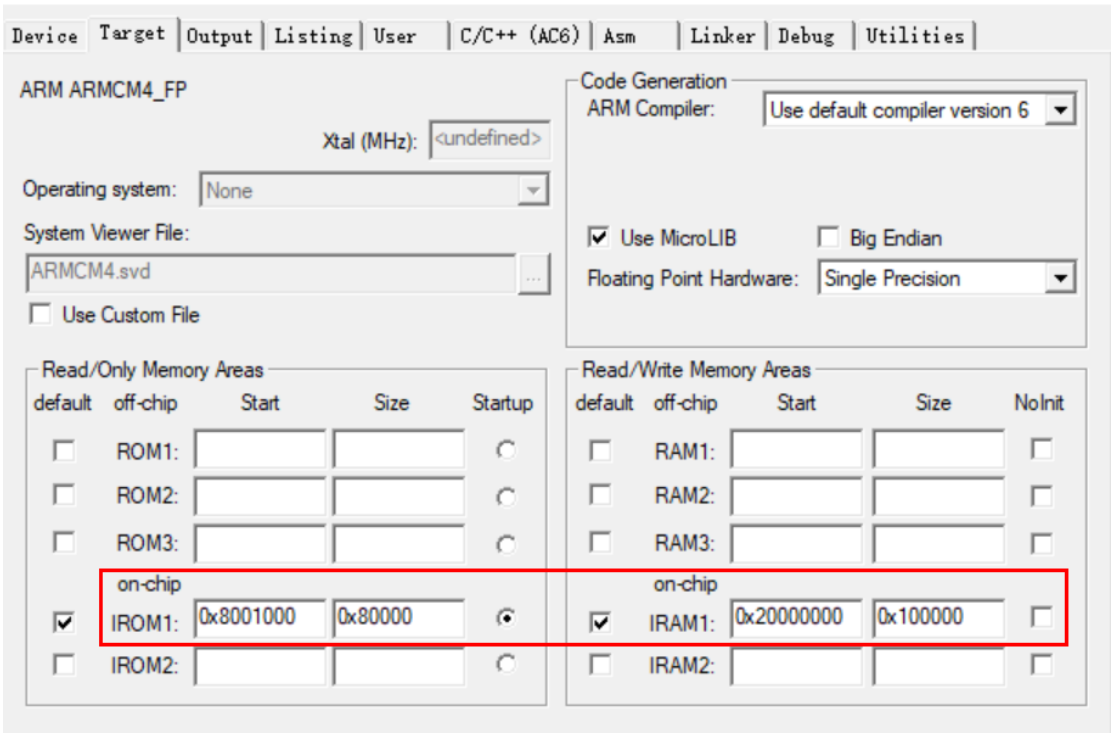


图 1-2 Target 设置

1.3. 设置仿真器

选择 J-LINK/J-Trace Cortex 仿真器， 点击 Settings 设置仿真器，如下：

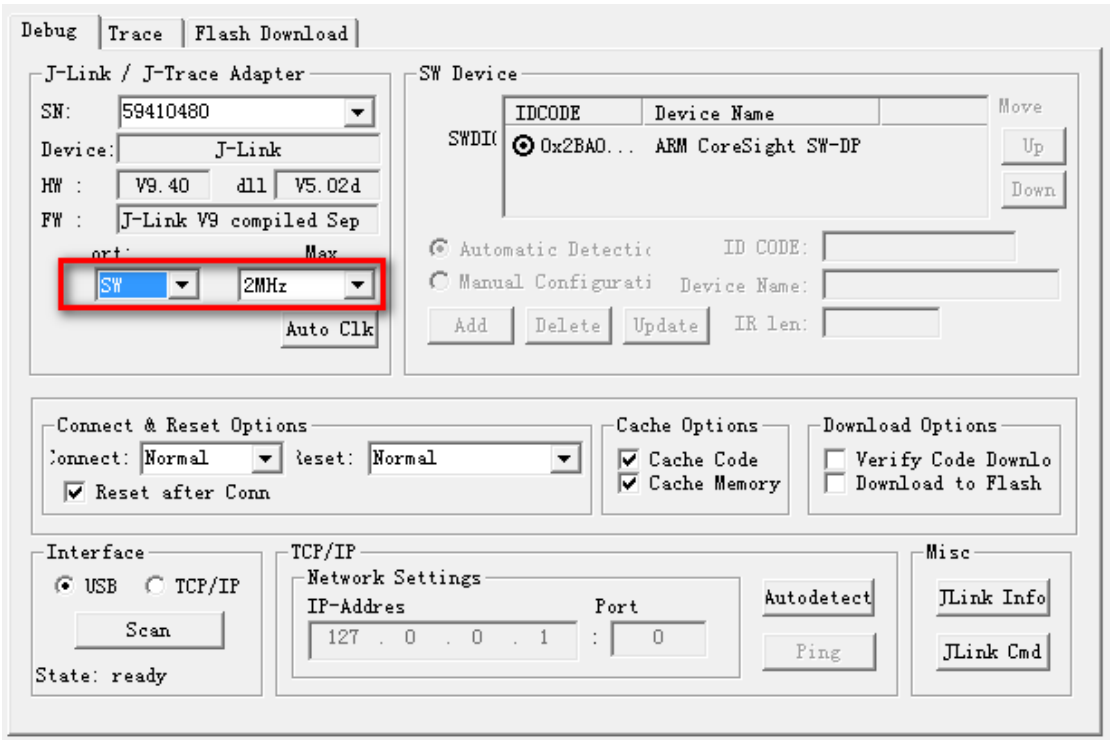


图 1-3 仿真器设置一

勾选 Run to main 启动调试时，程序在 main 入口处停止。

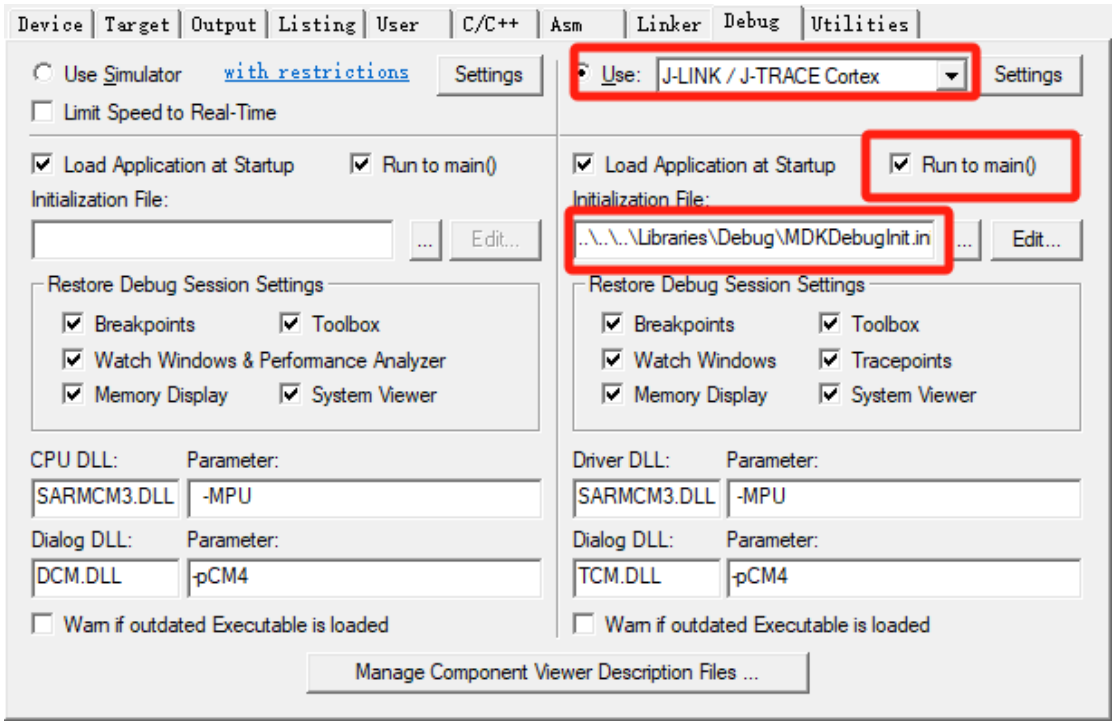


图 1-4 仿真器设置二

Initialization File 文件内容见图 5。PC 地址通过自动获取得到。

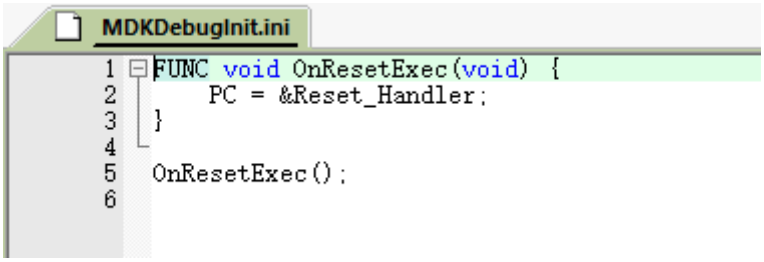


图 1-5 Flash.ini 文件

备注：程序以向量表开始，CM4 对应的向量表地址偏移 0x00 对应 MSP 初始值，地址偏移 0x04 对应复位向量。

1.4. 设置 Utilities flash

在 Flash Download 标签 Add 对应的 FLM 文件，需要将资料中的 MH2457.FLM 文件拷贝至 Keil 安装目录\ARM\Flash 目录下。

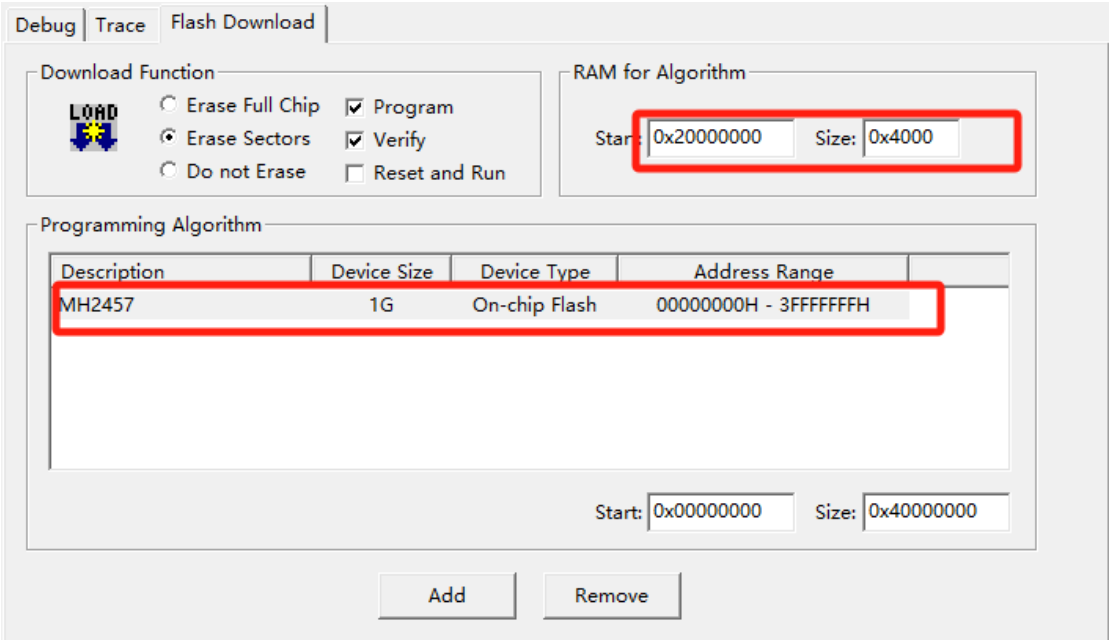


图 1-6 Flash Download 设置

2. 修订记录

表 2-1 修订记录

日期	修订版本	描述
2025-01-06	1.0	1. 初稿完成
2025-05-28	1.1	1. 更新模板

DISCLAIMER

The information in this document is current as of the published date. The information is subject to change without notice. For actual design-in, refer to the latest publications of MEGAHUNT Datasheets, and other official documents, for the most up-to-date specifications of MEGAHUNT products. Not all products and/or types are available in every country. Please contact a MEGAHUNT sales representative for availability and additional information.

No part of this document may be copied or reproduced in any form or by any means without the prior written consent of MEGAHUNT. MEGAHUNT assumes no responsibility for any errors or inaccuracies that may appear in this document.

MEGAHUNT disclaims any liability for patent, copyright or other intellectual property rights infringements of third parties by or arising from the use of MEGAHUNT products listed in this document or any other liability arising from the use of such products. No license, express, implied or otherwise, is granted under any patents, copyrights or other intellectual property rights of MEGAHUNT or others. Descriptions of circuits, software and other related information in this document are provided for illustrative purposes in semiconductor product operation and application examples. The incorporation of these circuits, software and information in the design of a customer's equipment shall be done under the full responsibility of the customer. MEGAHUNT assumes no responsibility for any losses incurred by customers or third parties arising from the use of these circuits, software and information.

The fonts, images, and other logos used by our company are legally authorized or legally used free of charge without infringing any third-party's rights.

Our company reserves the right to modify or revoke this disclaimer.

If you have any doubts, please contact us promptly and we will actively resolve them.

For more information about MEGAHUNT products and solutions, visit our website at www.megahuntmicro.com